

PACKAGE FUNCTION	FULL TRACK	TRACK N STOP	TRACK, STOP, CONTROL BASIC	TRACK, STOP, CONTROL, TOTAL
	LEVEL 1 PACKAGE	LEVEL 2 PACKAGE	LEVEL 3 PACKAGE	full package.
Installation Effort	2 WIRE INSTALL ONLY +12v wire and ground wire. Brown wire (-0v), Red Wire (+12V). See manual	4 WIRE INSTALL. Brown (-0v), Red (+12V), Blue (ignition), Black/white (engine kill). See manual	7 WIRE INSTALL. Brown (-0v), Red (+12V), Blue (ignition), Black/white (engine kill), yellow/white (lock), brown/white (unlock), Yellow (door/hood Trigger input). See manual	FULL INSTALL 9-12 WIRES. Brown (0v), Red (+12V), Blue (ignition), Black/white (engine kill), yellow/white (lock), brown/white (unlock), Yellow (door/hood Trigger input), Black (Alarm trigger wire), Red/white (R-start activation), + others depending on need. See manual
Track vehicle from Computer	X	X	X	X
Track vehicle from Mobile Phone	X	X	X	X
Monitor Vehicle Speed	X	X	X	X
Monitor Engine Running status on your phone.	X	X	X	X
Motion Detector Alerts to your mobile Phone	X	X	X	X
Text Alert when Vehicle Over Speeds	X	X	X	X
Set virtual security perimeter around Vehicle	X	X	X	X
Low Battery monitor sms alerts	X	X	X	X
Monitor Vehicle Mileage	X	X	X	X
Customizable Refresh Rates	X	X	X	X
Cell Tower Assist Tracking	X	X	X	X
Vehicle Engine Disable from cell phone Ignition Monitor Detection. (Alerts to your cell phone when key is turned in ignition)		X	X	X
		X	X	X
Door Locks/Unlock from cell Phone			X	X
Car Alarm Arm/Disarm (for vehicles equipped with alarm system)			X	X
Door/trunk/hood trigger alerts (Alerts to your cell phone if door/trunk/hood is opened when car is armed)			X	X
Vehicle Remote Start control (Remote Starter Included or Push to start compatible)				X
Add on to existing/factory Alarm System				X
Alarm System Siren alert				X
Engine RPM Status				X