

Quick Wire Connection Guide

Connect2Car Unit Installed With an Aftermarket Remote Starter Unit (generic) www.connect2car.com

	Connect2Car Unit Wire	Connection point	Comments
1	Brown Wire	Ground	Connect to Battery Negative
2	Red Wire	Power 12V	Connect to Battery Positive
3	Purple Wire (Battery positive input)	Power 12V	This is a Battery Monitor Wire (Connect to Battery Positive or backup battery Positive)
4	Blue Wire (Positive input)	Ignition	Ignition input. Should be 12V+ when ignition is on.
5	Black/White Wire (negative output)	Engine Kill (Remote Vehicle shutdown)	Should be connected to an ignition kill, starter interrupt. (For preferred instant shut down of Vehicle, connect this as an ignition kill via a relay)
6	Red/White Wire (negative output)	Remote Start Activation	Connect to Remote Starter Activation input of aftermarket remote starter
7	Yellow/White Wire (negative output)	Door Lock Output/Arm	Connect to Door Lock. (if available) Also connect to Arm wire output of Factory Alarm or Aftermarket Alarm.
8	Brown/White Wire (negative output)	Door Unlock Output/Disarm	Connect to Door Unlock (if available) Also connect to Disarm wire output of Factory Alarm or Aftermarket Alarm
9	Yellow Wire (Positive Input)	Connect to Door pin switch/door open sensor	Connect usually to door trigger or dome light trigger. This is a Positive input. It detects the door as open when Positive
10	Black Wire (Positive Input)	Alarm Trigger Wire	This wire should be connected to the siren activation wire. This is a positive input wire.

GPS ANTENNA MOUNTING

- GPS Antenna can be mounted on the underside of dashboard, as close as possible to the top, preferably on a plastic surface for better reception.
- The GPS antenna is very sensitive (flashing Red/Orange light on the unit means GPS is picking good Reception).

ADDITIONAL WIRING (WINDOW UP/DOWN CONTROL, OR CONVERTIBLE TOP UP/DOWN CONTROL

	Connect2Car Unit Wire	Connection point	Comments
1	Yellow/White Wire (negative output)	Window Up, <i>also Door Lock Output / Arm</i>	Use relays to also connect this output to the Window up Trigger or Convertible Roll up switch. When the user sends a window up from the phone, this output executes a single pulse for the Door lock, and then a long 7-15sec pulse(adjustable) for the Window Roll up.
2	Brown/White Wire (negative output)	Window Down, <i>also Door Unlock Output/Disarm</i>	Use relays to also connect this output to the Window down Trigger or Convertible Roll up switch. When the user sends a window up from the phone, this output executes a single pulse for the Door lock, and then a long 7-15sec pulse(adjustable) for the Window Roll up.