

CONNECT2CAR ANYWHERE G2

Please follow the following steps to get started.

STEP 1 Activate Your Unit

- Online: Visit www.connect2car.com/activate
- Fax: Fill and fax the activation form included in your shipment.
- Email: Fill, scan and email the activation form to activation@connect2car.com

STEP 2 Get your Connect2car unit installed

•Your Connect2car unit requires a valid GSM sim card to operate. Note: Ensure that the sim card has enough credit/balance for SMS texting. The G2 uses SMS texts to communicate with your phone and the Connect2car server.



- Open the sim slot as seen in the diagram using a pointed object to release the sim holder and Insert the sim card.
- The unit is ready for installation.

STEP 3 Control Your Car

- Mobile Phone Text: Visit www.connect2car.com/mobile and download the anywhere software for your phone.
- Mobile Browser: Visit www.connect2car.com/mobile/track
- Computer: Visit www.connect2car.com/track